

ChromaLuxe Connections


Installing Connections Collages

MATERIALS NEEDED:


- Template
- Sublimated panels with attached Connections Hangers
- Painter's Tape
- Drill and/or screwdriver
- No. 10 **Pan- or Round-Head** Phillips Screws & Wall Anchors
- Mallet or hammer

OPTIONAL TOOLS:

- Level (or use the one on your phone!)
- Studfinder

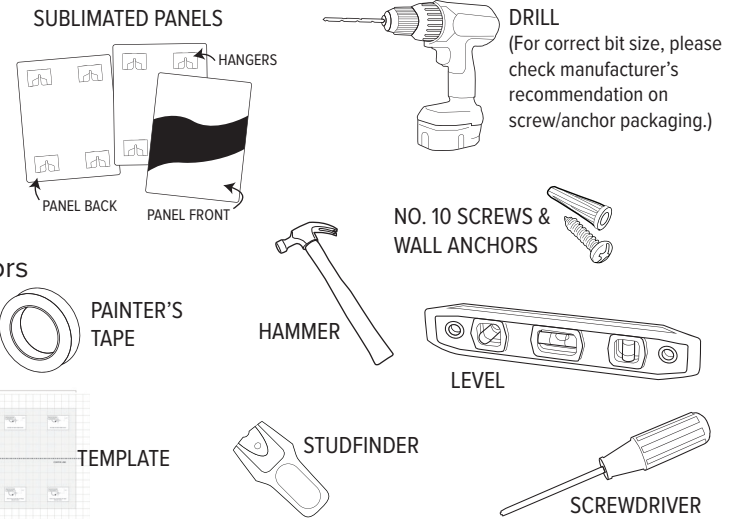

INSTRUCTIONS

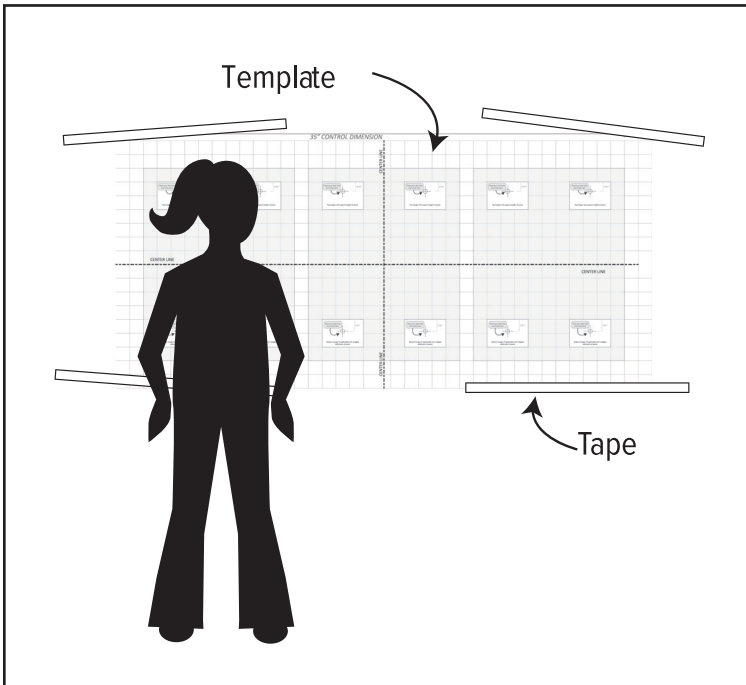

Step 1: HANG TEMPLATE


Gather materials and tools, and read through instructions.

Using painter's tape, hang template on wall in the location that you want to install your Connections collage. Using a bubble level, your phone level*, or just your eyes, level template to make sure panels will be straight on your wall. (Remember that sometimes a level reading can still look unlevel due to irregular walls and trim. Trust your eyes!)

Step back and take a look at your collage location.


Make adjustments to template placement as needed.

*TIP: *If you have an iPhone, launch the Compass app on your iPhone. (You may need to calibrate it by spinning the phone around.) Next, swipe left on the screen for the level tool. Turn your iPhone on its side or back to use the level. For other phones, there are several free leveling apps available on GooglePlay. Alternatively, you can eyeball your template's levelness, or you can use a real bubble level.*

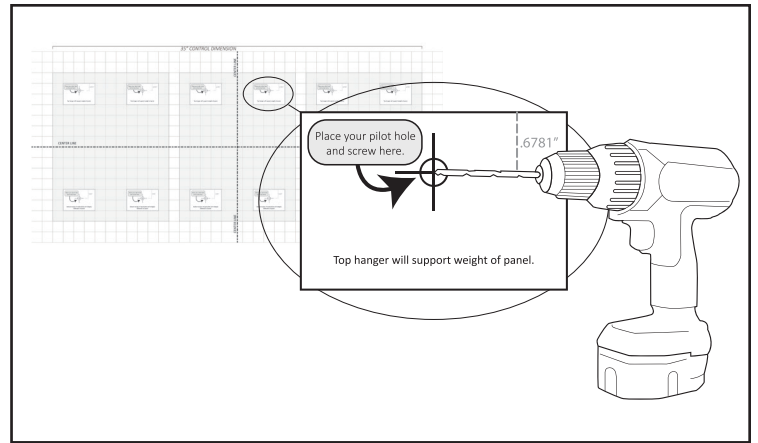



Step 2: DRILL HOLES

Identify the drill targets on your template. Check your Wall Anchor packaging for correct drill bit size. Drill a hole in each target location. Hit the target as closely as you can!

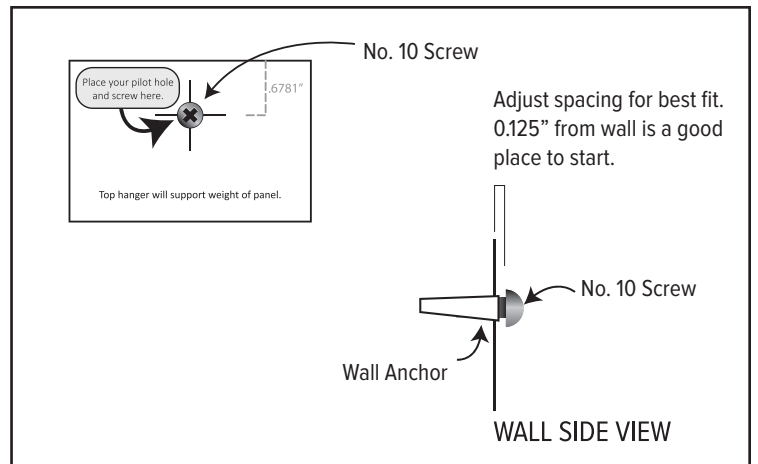

Step 3: INSTALL SCREWS

Tap wall anchors into pilot holes. Install screws into wall anchors using drill or screwdriver. Walls are not always completely flat, so tighten and/or loosen the gap between the screw head and the wall to customize the best fit for your location. Spacing heads 0.125\"/>

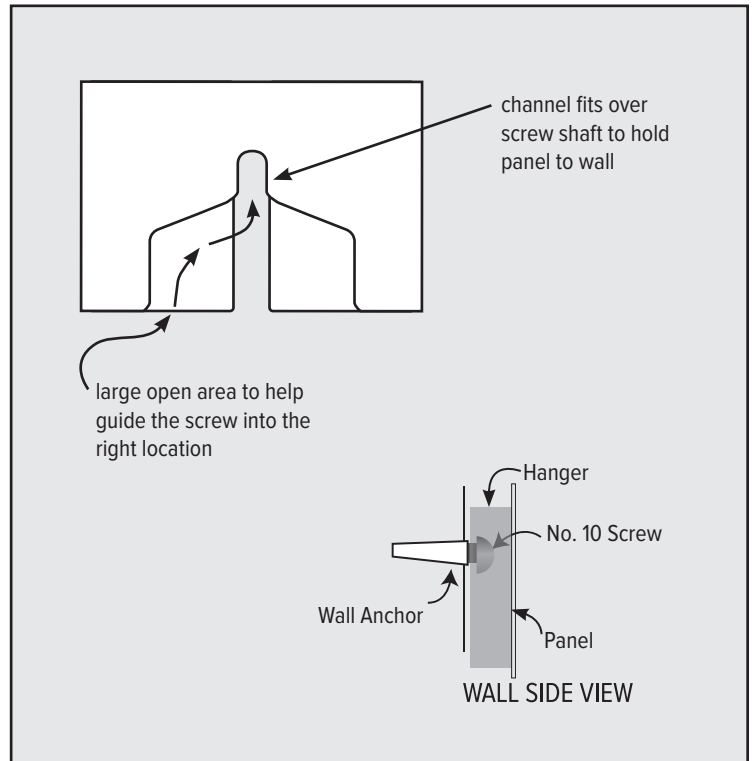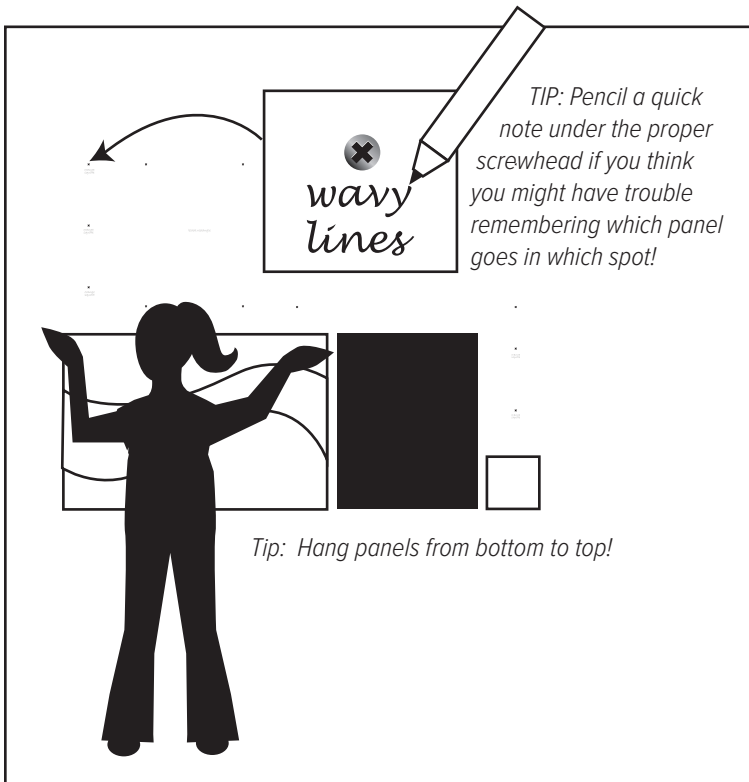


Step 4: HANG PANELS

When all screws are installed, gently tear away the template.

Starting at the bottom of your collage and working your way to the top, hang your panels. **You will feel a solid click as the top hangers fit over the screws and settle into place.**

Note: The top hanger rests on the screw shaft. The bottom hanger works to keep the corners flat, but does not support panel weight.

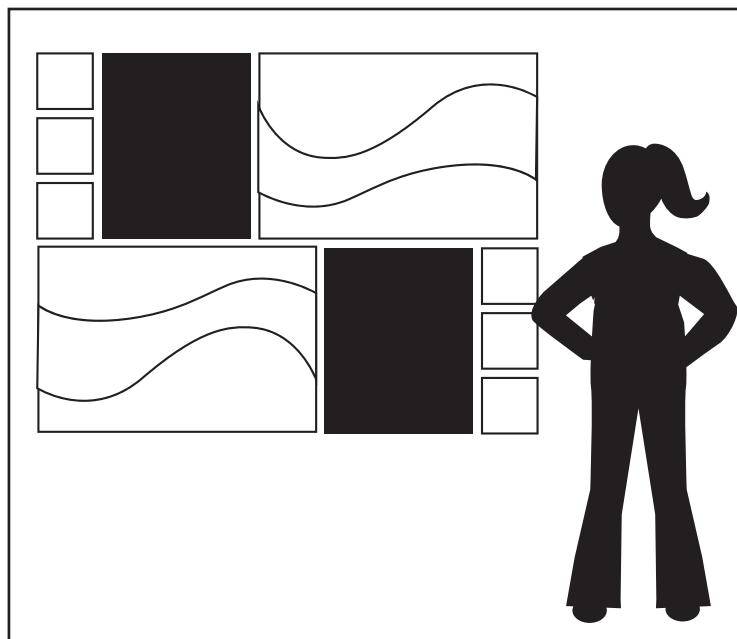

Enjoy your new collage!

ChromaLuxe®
True to your vision®